









 






 

 







 











 
 




Originalfernbedienung Ersatzfernbedienung

	Red/Sound		Sound / Title
	Red/Sound		Red / Netflix / Search
	Green/Picture		Picture / Format
	Green/Picture		Green / APP / Repeat
	Yellow/P.		Yellow / YouTube / Repeat
	Blue/VT		Blue / Prime Video / Random
	Ino		Smart / List
	TV		TV/Radio /
	Zoom-/Stop		Down
	Zoom+/Func VI		Up
	-		Vol-
	+		Vol+
	Prog.-		CH- / Page-
	Prog.+		CH+ / Page+
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Mute		Mute / Dimmer
	0/AV		0
	0/AV		AV / Input / RDS
	Power		Power

