 


 
 

 



 





 





 
 






 

 







 

 





 

 











 



 





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Tuner		Shift + 6
	Phono		Shift + 8
	TV		Shift + 1
	Tape		Shift + 5
	AUX		Shift + 7
	CD		Shift + 3
	Vol+		Vol+
	Vol-		Vol-
	CDR		Shift + 2
	Mode		Setup / OPT /
	Folder+		CH+ / Page+
	Folder-		CH- / Page-
	I<<		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze


Originalfernbedienung Ersatzfernbedienung

	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	Open/Close		Eject / Surround
	Scroll ▲		Up
	Scroll ▼		Down
	Repeat		Green / APP / Repeat
	Random		Blue / Prime Video / Random
	Auto		Text / Goto
	1 CD		1
	2 CD		2
	3 CD		3
	4 CD		4
	5 CD		5
	6 CD		6
	7 CD		7





Originalfernbedienung Ersatzfernbedienung

	8 CD		8
	9 CD		9
	0 CD		0
	10+		Guide / EPG / -/--
	10-		Fav / Marker / PC
	RDS		AV / Input / RDS
	Mute		Mute / Dimmer
	FM Mode		Picture / Format
	Band		TV/Radio /
	Select		OK

Originalfernbedienung Ersatzfernbedienung

