





 



 



 












 

 

 






**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	List		List
	MTS/I/II		Dual
	Aspect		3D
	Display		Info

**Originalfernbedienung    Ersatzfernbedienung**

	PMode		Format
	SMode		Shift + Dual
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Source		AV
	Sleep		Sleep
	Auto		Options
	CH+		Ch +
	CH-		Ch -
	Red		Red

 
 

 






Originalfernbedienung    Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	USB		Media
	FAV		Pre Ch
	FAV+		Shift + Ch +
	FAV-		Shift + Ch -
	Repeat		Text
	Stop		Stop
	Pause		Pause
	Play		Play
	A-B		D. Menu
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	EPG		Guide

Originalfernbedienung    Ersatzfernbedienung

	CC		Subt
	Tv/Radio		TV/R
	Rec		Rec

