


 

 

 

 





 



 



 

















 







 


 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SV/Timer		Guide
	Pause		Pause
	Stop		Stop
	Play		Play
	>>		>>
	<<		<<


 

 
 


 


 


 
 







Originalfernbedienung Ersatzfernbedienung

	Record		Rec
	Info		Info
	Up		Up
	CH+		Ch +
	CH-		Ch -
	Down		Down
	Right		Right
	Vol+		Vol +
	Left		Left
	Vol-		Vol -
	OK		Ok
	Clear		Exit
	SP/LP		Format
	Timer On/Off		AV
	Timer On/Off		Sleep
	Audio		Dual
	Index		Smart


 














 

 


 

 

 



 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	PIP		List
	4		4
	5		5
	6		6
	Format		Format
	7		7
	8		8
	9		9
	?		D. Menu
	0		0
	Mute		Mute
	Info		Info
	Z		AV

Originalfernbedienung Ersatzfernbedienung

	Z		Sleep
	Up / CH +		Ch +
	Up / CH +		Up
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	Right / Vol +		Right
	Right / Vol +		Vol +
	TXT		Smart
	Down / CH -		Down
	Down / CH -		Ch -
	TV-G		TV/R
	Record		Rec
	DUB.		Options
	Index		Media
	Audio		Dual
	Monitor		Text

