










 





 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red / Eject		Red
	Red / Eject		Eject
	Green / Title		Green
	Yellow / DVD		Yellow
	Yellow / DVD		Options
	Blue / A-B		Blue
	<</[≡o]		<<
	>>/[≡?]		>>
	l<</[≡+]		l<<
	>>l/[≡..]		>>l
	Play		Play
	Pause		Pause
	Stop		Stop
	Angle / [≡i]		Smart
	Return / Text		Text









 

 
 
 
 

 

 





 

 


 
 
Originalfernbedienung Ersatzfernbedienung

	Return / Text		Shift + Back
	Subtitle		Subt
	Display		Shift + Info
	Menu / Info		Info
	Menu / Info		D. Menu
	Menu		Menu
	Up		Up
	Source		AV
	Left		Left
	OK		Ok
	Right		Right
	EPG		Guide
	Down		Down
	Exit		Exit
	Vol+		Vol +
	FAV		Pre Ch
	CH+		Ch +





Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	REP		Rec
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Audio		Dual
	0		0
	Recall / Goto		Back

Originalfernbedienung Ersatzfernbedienung

