 









 





 









 








 




Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	DVD		2
	TV		1
	VCR		4
	CD-R		3
	TUN		6
	Test Tone		Display / Media
	Input ATT		TV/Radio /
	FL Dimmer		Shift + Mute / Dimmer
	CH Select		Smart / List
	CH Level-		CH- / Page-
	CH Level+		CH+ / Page+
	Effect-		<< / Tune-
	Effect+		>> / Tune+
	Remote Setup		Setup / OPT /
	Standard		Subtitle / EQ
	Adv.Surr.		Eject / Surround







Originalfernbedienung Ersatzfernbedienung

	Stereo		Audio / Lang I/II
	Input Sel		AV / Input / RDS
	Signal Select		Sound / Title
	Midnight /		Sleep / Timer
	Mute		Mute / Dimmer
	Up/Tune+		Up
	Up/Tune+		Shift + >> /
	Left/ST-		Left
	Left/ST-		Shift + I<< / Preset-
	Enter		OK
	Right/ST+		Right
	Right/ST+		Shift + >>I / Preset+
	Down/Tune-		Down
	Down/Tune-		Shift + << /
	Master		Vol+
	Master Volume-		Vol-
	TV Vol+		Shift + Vol+





Originalfernbedienung Ersatzfernbedienung

	Tv Vol-		Shift + Vol-
	TV Input		Shift + AV / Input / RDS
	TV Power		Shift + Power

















 

















Originalfernbedienung Ersatzfernbedienung








**Originalfernbedienung    Ersatzfernbedienung**

	Power DVD		Power
	1 DVD		1
	2 DVD		2
	3 DVD		3
	4 DVD		4
	5 DVD		5
	6 DVD		6
	7 DVD		7
	8 DVD		8
	9 DVD		9
	0 DVD		0
	+10 DVD		Guide / EPG / -/--
	Menu DVD		Menu / Home
	Top Menu DVD		D.Menu / Top
	Master		Vol+
	Master volume-		Vol-
	Mute		Mute / Dimmer

**Originalfernbedienung    Ersatzfernbedienung**

	Channel+ DVD		CH+ / Page+
	Channel- DVD		CH- / Page-
	Up DVD		Up
	Down DVD		Down
	Right DVD		Right
	Left DVD		Left
	Enter DVD		OK
	Pause DVD		Pause / Step / Freeze
	Rec DVD		Rec / Rec Mode
	Play DVD		Play / Slow
	<< DVD		<< / Tune-
	>> DVD		>> / Tune+
	>>I DVD		>>I / Preset+
	Stop DVD		Stop / Hold
	I<< DVD		I<< / Preset-
	Audio DVD		Audio / Lang I/II
	Sub Title DVD		Subtitle / EQ





## Originalfernbedienung    Ersatzfernbedienung

	Angle DVD			Info / Angle
	Power VCR			Shift + Power
	1 VCR			Shift + 1
	2 VCR			Shift + 2
	3 VCR			Shift + 3
	4 VCR			Shift + 4
	5 VCR			Shift + 5
	6 VCR			Shift + 6
	7 VCR			Shift + 7
	8 VCR			Shift + 8
	9 VCR			Shift + 9
	0 VCR			Shift + 0
	Disc VCR			Shift + Back / Return
	Channel+ VCR			Shift + CH+ /
	Channel- VCR			Shift + CH- /
	Up VCR			Shift + Up
	Down VCR			Shift + Down

## Originalfernbedienung    Ersatzfernbedienung










 

 



















	Right VCR			Shift + Right
	Left VCR			Shift + Left
	Enter VCR			Shift + OK
	Pause VCR			Shift + Pause / Step /
	Play VCR			Shift + Play /
	Stop VCR			Shift + Stop /
	<< VCR			Shift + << /
	>>I VCR			Shift + >>I / Preset+
	>> VCR			Shift + >> /
	I<< VCR			Shift + I<< / Preset-
	Rec VCR			Shift + Rec / Rec Mode








## Originalfernbedienung Ersatzfernbedienung

	Power CD		Power
	1 CD		1
	2 CD		2
	3 CD		3
	4 CD		4
	5 CD		5
	6 CD		6
	7 CD		7
	8 CD		8
	9 CD		9
	0 CD		0
	+10 CD		Guide / EPG / -/--
	Disc CD		Back / Return
	Master		Vol+
	Master Volume-		Vol-
	Mute		Mute / Dimmer
	Channel+ CD		CH+ / Page+

## Originalfernbedienung Ersatzfernbedienung

	Channel- CD		CH- / Page-
	Up CD		Up
	Down CD		Down
	Right CD		Right
	Left CD		Left
	Enter CD		OK
	Pause CD		Pause / Step / Freeze
	Play CD		Play / Slow
	<< CD		<< / Tune-
	>> CD		>> / Tune+
	>>  CD		>>  / Preset+
	I<< CD		I<< / Preset-
	Stop CD		Stop / Hold
	Power TVC		Shift + Power
	1 TVC		Shift + 1
	2 TVC		Shift + 2
	3 TVC		Shift + 3





**Originalfernbedienung    Ersatzfernbedienung**

	4 TVC	 + 	Shift + 4
	5 TVC	 + 	Shift + 5
	6 TVC	 + 	Shift + 6
	7 TVC	 + 	Shift + 7
	8 TVC	 + 	Shift + 8
	9 TVC	 + 	Shift + 9
	0 TVC	 + 	Shift + 0
	+10 TVC	 + 	Shift + Guide / EPG / -/-
	Disc TVC	 + 	Shift + Back / Return
	Menu TVC	 + 	Shift + Menu /
	Up TVC	 + 	Shift + Up
	Down TVC	 + 	Shift + Down
	Right TVC	 + 	Shift + Right
	Left TVC	 + 	Shift + Left
	Enter TVC	 + 	Shift + OK
	Pause TVC	 + 	Shift + Pause / Step /
	Rec TVC	 + 	Shift + Rec / Rec Mode

**Originalfernbedienung    Ersatzfernbedienung**



 



 





 





















	Play TVC	 + 	Shift + Play /
	Stop TVC	 + 	Shift + Stop /
	<< TVC	 + 	Shift + << /
	>>I TVC	 + 	Shift + >>I / Preset+
	>> TVC	 + 	Shift + >> /
	I<< TVC	 + 	Shift + I<< / Preset-







Originalfernbedienung Ersatzfernbedienung

	Power TUN		Power
	1 TUN		1
	2 TUN		2
	3 TUN		3
	4 TUN		4
	5 TUN		5
	6 TUN		6
	7 TUN		7
	8 TUN		8
	9 TUN		9
	0 TUN		0
	Master		Vol+
	Master volume-		Vol-
	Mute		Mute / Dimmer
	Up TUN		Up
	Down TUN		Down
	Right TUN		Right

Originalfernbedienung Ersatzfernbedienung

	Left TUN		Left
	D.Access TUN		Play / Slow
	Band TUN		Smart / List
	T.Edit		Pause / Step / Freeze
	Class TUN		<< / Tune-
	RF ATT TUN		>> / Tune+
	MPX TUN		Stop / Hold
	Display TUN		Display / Media
	Power CDR		Shift + Power
	1 CDR		Shift + 1
	2 CDR		Shift + 2
	3 CDR		Shift + 3
	4 CDR		Shift + 4
	5 CDR		Shift + 5
	6 CDR		Shift + 6
	7 CDR		Shift + 7
	8 CDR		Shift + 8





**Originalfernbedienung Ersatzfernbedienung**

	9 CDR		Shift + 9
	0 CDR		Shift + 0
	+10 CDR		Shift + Guide / EPG / -/--
	Channel+ CDR		Shift + CH+ /
	Channel- CDR		Shift + CH- /
	Up CDR		Shift + Up
	Down CDR		Shift + Down
	Right CDR		Shift + Right
	Left CDR		Shift + Left
	Enter CDR		Shift + OK
	Pause CDR		Shift + Pause / Step /
	Play CDR		Shift + Play /
	Stop CDR		Shift + Stop /
	<< CDR		Shift + << /
	Rec CDR		Shift + Rec / Rec Mode
	I<< CDR		Shift + I<< / Preset-
	>> CDR		Shift + >> /

Tune+

**Originalfernbedienung Ersatzfernbedienung**

	>>I CDR		Shift + >>I / Preset+
--	---------	--	-----------------------

