




 






 

 



 





 



 



 





 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/R		TV/Radio /
	Quick Menu		D.Menu / Top
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info / Angle
	Guide		Guide / EPG / -/--
	Vol+		Vol+
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TXT		Text / Goto
	Stop		Stop / Hold
	Play		Play / Slow





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 I<< / Preset-
	 << / Tune-
	 >> / Tune+
	 >>I / Preset+

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

