







































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / □		0
	0 / □		Display / Media
	Exit / TV/Radio		TV/Radio /
	Exit / TV/Radio		Exit / Cancel / Clear
	Mute		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	i		Info / Angle
	Back		Back / Return
	●		Rec / Rec Mode
	Menu		Menu / Home
	Guide		Guide / EPG / -/-
	P+		CH+ / Page+
	P-		CH- / Page-
	↑		Shift + CH+ /
	↑		>>I / Preset+
	↓		Shift + CH- /
	↓		I<< / Preset-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Green / Option		Setup / OPT /



