

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info / Angle
	OSD		Display / Media
	ECO		Zoom / Size
	Color		Setup / OPT /
	CONT+		CH+ / Page+
	Freeze		Pause / Step / Freeze
	I-Style		D.Menu / Top
	PIP / PBP		Picture / Format
	CONT-		CH- / Page-
	Menu		Menu / Home
	Up / Bri+		Up
	Exit		Exit / Cancel / Clear
	Left / Vol-		Left
	Left / Vol-		Vol-
	Enter		OK
	Right / Vol+		Right

Originalfernbedienung Ersatzfernbedienung

	Right / Vol+		Vol+
	Audio Sel		Audio / Lang I/II
	Down / Bri-		Down
	Mute		Mute / Dimmer
	1 / VGA		1
	2 / DVI		2
	3 / DP1		3
	4 / HDMI 1		4
	5 / HDMI 2		5
	6 / DP2		6
	7 / YPbPr/HDMI3		7
	8 / S-Video		8
	9 / AV		9
	Auto-ADJ		Smart / List
	0 / Auto-Select		0
	Input		AV / Input / RDS

