




























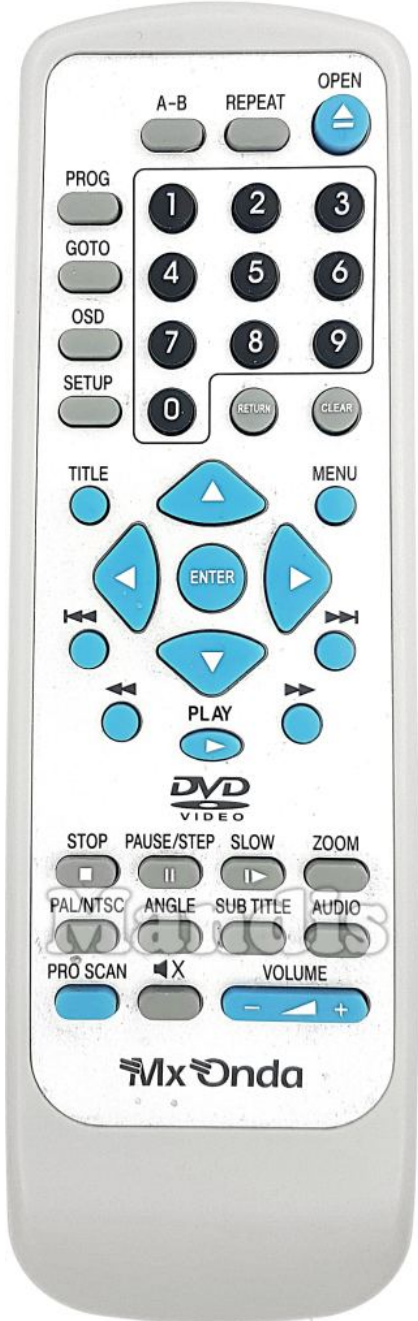
Originalfernbedienung Ersatzfernbedienung

A-B	A-B		Yellow / YouTube / Repeat
OPEN	Open		Eject / Surround
REPEAT	Repeat		Green / APP / Repeat
PROG	Prog		TV/Radio /
GOTO	Goto		Text / Goto
SETUP	Setup		Setup / OPT /
OSD	OSD		Display / Media
RETURN	Return		Back / Return
CLEAR	Clear		Exit / Cancel / Clear
MENU	Menu		Menu / Home
TITLE	Title		Sound / Title
1	1		1
2	2		2
3	3		3
4	4		4
5	5		5
6	6		6

Originalfernbedienung Ersatzfernbedienung

7	7		7
8	8		8
9	9		9
0	0		0
	Up		Up
	Down		Down
	Enter		OK
	Right		Right
	Left		Left
	I<<		I<< / Preset-
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Pause/Step		Pause / Step / Freeze
	Slow		Shift + Play / Slow





Originalfernbedienung Ersatzfernbedienung

	Zoom		Zoom / Size
	PAL/NTSC		Picture / Format
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Pro Scan		Smart / List
	Mute		Mute / Dimmer
	Volume+		Vol+
	Volume-		Vol-

Originalfernbedienung Ersatzfernbedienung

