







 









 
 

 



 

 




 



 

 

 

 

 

 
 
 
 




 

 

 

 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Tv Sys		AV / Input / RDS
	(*)		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Fav / Marker / PC
	EPG		Guide / EPG / -/--
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ



 







 

 



 





**Originalfernbedienung    Ersatzfernbedienung**

	CH+		CH+ / Page+
	CH-		CH- / Page-
	My List		TV/Radio /
	Mark		Shift + Fav / Marker / PC
	Return		Back / Return
	Home		Shift + Menu /
	Info		Info / Angle
	Menu		Menu / Home
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Rec		Rec / Rec Mode
	Rec Schedule		Shift + Rec / Rec Mode
	<<		<< / Tune-
	Play/Pause		Play / Slow





Originalfernbedienung Ersatzfernbedienung

	>>		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung