





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Last Memory		TV/Radio /
	Conditon		Zoom / Size
	Open/Close		Eject / Surround
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Setup		Setup / OPT /
	Menu		Menu / Home
	Top Menu		D.Menu / Top
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Display		Display / Media
	Return		Back / Return
	I<</Prev		I<< / Preset-
	>>I/Next		>>I / Preset+
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<I/Step		CH- / Page-
	Slow I>		CH+ / Page+
	<</Rev		<< / Tune-
	>>/Fwd		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung Ersatzfernbedienung

7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
0	0	HDMI - SAT	0
+10	+10	GUIDE EPG	Guide / EPG / -/--
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
RANDOM	Random	Prime Video RANDOM	Blue / Prime Video / Random
PROGRAM	Program	SHIFT + PROGRAM TV/RADIO	Shift + TV/Radio / Program
SEARCH MODE	Search Mode	NETFLIX SEARCH	Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

