












 





 


 
















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |
|  | P- |  | CH- / Page- |
|  | P+ |  | CH+ / Page+ |
|  | Power 2 |  | Shift + Power |
|  | [+] |  | Display / Media |
|  | PP |  | Back / Return |
|  | [] |  | Info / Angle |
|  | []↔ |  | Picture / Format |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|-----------------------|
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | - / .. |  | Guide / EPG / - / .. |
|  | Contrast- |  | I << / Preset- |
|  | Contrast+ |  | >> I / Preset+ |
|  | Brightness- |  | Down |
|  | Brightness+ |  | Up |
|  | Text |  | Text / Goto |
|  | Text Subcode |  | Subtitle / EQ |
|  | Text Hold |  | Shift + Stop / |
|  | Text Size |  | Zoom / Size |
|  | Text Reveal |  | Smart / List |
|  | Text Index / Play |  | Play / Slow |
|  | Text Mix |  | Shift + Text / |
|  | Text Cancel |  | Exit / Cancel / Clear |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------------|--|-----------------------------|
| | Red / Rec | | Red / Netflix / Search |
| | Red / Rec | | Rec / Rec Mode |
| | Green / Stop | | Green / APP / Repeat |
| | Green / Stop | | Stop / Hold |
| | Yellow / << | | Yellow / YouTube / Repeat |
| | Yellow / << | | << / Tune- |
| | Blue / >> | | Blue / Prime Video / Random |
| | Blue / >> | | >> / Tune+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------|--|------------------|
| | Power | | Power |
| | Mute | | Mute / Dimmer |
| | Vol- | | Vol- |
| | Vol+ | | Vol+ |
| | P- | | CH- / Page- |
| | P+ | | CH+ / Page+ |
| | Power 2 | | Shift + Power |
| | [+] | | Display / Media |
| | PP | | Back / Return |
| | [] | | Info / Angle |
| | []↔ | | Picture / Format |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------------|--|-----------------------|
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | -/-- | | Guide / EPG / -/-- |
| | Text | | Text / Goto |
| | Text Subcode | | Subtitle / EQ |
| | Text Hold | | Shift + Stop / |
| | Text Size | | Zoom / Size |
| | Text Reveal | | Smart / List |
| | Play | | Play / Slow |
| | Text Mix | | Shift + Text / |
| | Text Cancel | | Exit / Cancel / Clear |
| | Rec | | Rec / Rec Mode |
| | Stop | | Stop / Hold |
| | << | | << / Tune- |
| | >> | | >> / Tune+ |

