




 




 



 



























 


 

 


 


 














**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide / EPG / -/--
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	APPS		Shift + Green / APP / Repeat













 

 

 

 







 
 
**Originalfernbedienung    Ersatzfernbedienung**

	Home		Shift + Menu /
	P+		CH+ / Page+
	P-		CH- / Page-
	Menu		Menu / Home
	i		Info / Angle
	Back		Back / Return
	Mouse		Display / Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	prime video		Shift + Blue / Prime
	f		Smart / List
	Red		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	Text		Text / Goto
	Rec		Rec / Rec Mode
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	MTS		Fav / Marker / PC
	Sub		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung