 



 

 

 



 

 









 




 




 

 






 

 





 






 

 

 







Originalfernbedienung Ersatzfernbedienung

	Index		Play / Slow
	Red / -1		Red / Netflix / Search
	Green / Timer /		Green / APP / Repeat
	Yellow / Stop		Yellow / YouTube / Repeat
	Blue / Reveal		Blue / Prime Video / Random
	[≡]]]		Rec / Rec Mode
	Cancel		Exit / Cancel / Clear
	Size		Zoom / Size
	TV		TV/Radio /
	Text		Text / Goto
	1		1
	2		2
	3		3
	Tint-		Shift + Left
	Tint+		Shift + Right
	4		4
	5		5

Originalfernbedienung Ersatzfernbedienung

	6		6
	Contrast-		<< / Tune-
	Contrast+		>> / Tune+
	7		7
	8		8
	9		9
	Brightness-		I<< / Preset-
	Brightness+		>>I / Preset+
	P/C		Back / Return
	0		0
	AV		AV / Input / RDS
	←•→		Display / Media
	*\*		Smart / List
	PIP		Picture / Format
	i		Info / Angle
	i		Menu / Home
	----		Subtitle / EQ




**Originalfernbedienung    Ersatzfernbedienung**

	Up / P+		Up
	Up / P+		CH+ / Page+
	Mute		Mute / Dimmer
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	AUX		Shift + 7
	Down / P-		Down
	Down / P-		CH- / Page-
	Power		Power

**Originalfernbedienung    Ersatzfernbedienung**






Originalfernbedienung Ersatzfernbedienung

	<		I<< / Preset-
	>		>>I / Preset+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	P+		CH+ / Page+
	P-		CH- / Page-
	Power		Power

Originalfernbedienung Ersatzfernbedienung





**Originalfernbedienung    Ersatzfernbedienung**

	Red		Red / Netflix / Search
	Green/Timer		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TXT		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	-0		<< / Tune-
	0+		>> / Tune+
	7		7
	8		8
	9		9
	-*		I<< / Preset-

**Originalfernbedienung    Ersatzfernbedienung**

	*+		>>I / Preset+
	P/C		Back / Return
	0		0
	PIP		Picture / Format
	i		Info / Angle
	P+		CH+ / Page+
	Up		Up
	Mute		Mute / Dimmer
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	AUX		Shift + 7
	P-		CH- / Page-
	Down		Down
	Power		Power

