

































 























Originalfernbedienung Ersatzfernbedienung

	Off/On		Power
	Sleep		Sleep / Timer
	Display		Display / Media
	FM Mode		AV / Input / RDS
	Tuner / Band		Shift + 6
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
	+10		Guide / EPG / -/--
	Program		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

	Cancel		Exit / Cancel / Clear
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	CD		Shift + 3
	CD Pause		Pause / Step / Freeze
	CD I<</>>		<< / Tune-
	CD I<</>>		I<< / Preset-
	CD >>/>>I		>> / Tune+
	CD >>/>>I		>>I / Preset+
	CD Play		Play / Slow
	CD Stop		Stop / Hold
	TAPE Reverse		Menu / Home
	TAPE Counter		Info / Angle
	TAPE Deck 1/2		Smart / List
	TAPE Rec Pause		Shift + Rec / Rec Mode
	TAPE <<		Down
	TAPE <<		Shift + << / Tune-



Program

Tune-



Originalfernbedienung Ersatzfernbedienung

	TAPE >>		Up
	TAPE >>	+	Shift + >> /
	TAPE Stop		OK
	TAPE Stop	+	Shift + Stop /
	TAPE Rev. Play		Left
	TAPE Play		Right
	TAPE Play	+	Shift + Play /
	Volume-		Vol-
	Volume+		Vol+

Originalfernbedienung Ersatzfernbedienung

