


 



 



 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV / Input / RDS
	OPT		Setup / OPT /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat



 



Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	SFI / EPG		Guide / EPG / -/--
	Exit / Recall		Back / Return
	Exit / Recall		Exit / Cancel / Clear
	Info		Info / Angle
	TV / Radio		TV/Radio /
	Menu		Menu / Home
	Prog+		CH+ / Page+
	Prog-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	Sleep		Sleep / Timer





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 TXT	 Text / Goto
 Still	 Pause / Step / Freeze
 Sound	 Sound / Title

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

