



Originalfernbedienung Ersatzfernbedienung

 











	Power		Power
	Open/Close		Eject / Surround
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Setup		Setup / OPT /
	3D		Picture / Format
	Zoom		Zoom / Size
	Book Mark		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Mode		Text / Goto
	Clear		Exit / Cancel / Clear
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Top Menu		D.Menu / Top
	Menu		Menu / Home
	Return		Back / Return
	Display		Display / Media
	Up		Up
	Down		Down
	Left		Left





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Right		Right				
	Enter		OK				
	Step		Shift + Pause / Step /				
	Audio		Audio / Lang I / II				
	Subtitle		Subtitle / EQ				
	Angle		Info / Angle				

