






































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Main Menu		Menu / Home
	Tape	 + 	Shift + 5
	Programme		Setup / OPT /
	MEM		Display / Media
	Exit/Status		Exit / Cancel / Clear
	Programme		CH+ / Page+
	Programme		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0/--		0
	AV		AV / Input / RDS
	0000		Back / Return
	SP/LP		Picture / Format
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

