




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Open/Close		Eject / Surround
	N/P		Blue / Prime Video / Random
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Language		Audio / Lang I/II
	Setup		Setup / OPT /
	Title		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Time		Sleep / Timer
	0		0
	10+		Guide / EPG / -/-
	Up		Up
	PBC		D.Menu / Top
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	Menu		Menu / Home
	Vol+		Vol+
	Vol-		Vol-
	Zoom		Zoom / Size
	Return		Back / Return
	L/R		Smart / List



