













 









 







 



















 







 

 









Originalfernbedienung Ersatzfernbedienung


 
	Open/Close		Eject / Surround
	Mute		Mute / Dimmer
	P/I		Exit / Cancel / Clear
	Setup		Setup / OPT /
	Angle		Info / Angle
	Random		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

	Language		Audio / Lang I/II
	Display		Display / Media
	Title		Sound / Title
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Search		Red / Netflix / Search
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Zoom		Zoom / Size
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Play		Play / Slow
	Vol+		Vol+





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Vol-		Vol-				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Resume		Picture / Format				
	Subtitle		Subtitle / EQ				
	Slow		Shift + Play /				
	Program		TV/Radio /				
	Vocal-Assist		Smart / List				
	PBC		Back / Return				

