





 

 









 



 











 

 



 



 

 

 

 
 
 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CD Direct 1		1
	CD Direct 2		2
	CD Direct 3		3
	Repeat		Green / APP / Repeat
	Shuffle		Blue / Prime Video / Random
	Program		TV/Radio /
	Sleep		Sleep / Timer
	Timer		Shift + Sleep / Timer
	Display		Display / Media
	Side (only)		Guide / EPG / -/--
	Pause		Pause / Step / Freeze
	Mute		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+
	Play		Play / Slow
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Inc.Surr.		AV / Input / RDS
	Flat		Picture / Format
	Loudness		Zoom / Size
	Bass-		Down
	Bass+		Up
	Treble-		CH- / Page-
	Treble+		CH+ / Page+
	Balance L		Left
	Balance R		Right

 

 



 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Timer		Shift + Sleep / Timer
	Side		Guide / EPG / -/--
	Pause		Pause / Step / Freeze
	Mute		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+
	Play		Play / Slow
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Inc.Surr.		AV / Input / RDS
	Flat		Picture / Format
	Loudness		Zoom / Size

 

 





 

 

 







 

 



 







Originalfernbedienung Ersatzfernbedienung

	Bass-		Down
	Bass+		Up
	Treble-		CH- / Page-
	Treble+		CH+ / Page+
	Balance L		Left
	Balance R		Right



 

 

 

 

 

 

 

 





**Originalfernbedienung    Ersatzfernbedienung**

	Repeat		Green / APP / Repeat
	Power		Power
	Shuffle		Blue / Prime Video / Random
	Program		TV/Radio /
	Sleep		Sleep / Timer
	Timer		Shift + Sleep / Timer
	Display		Display / Media
	Pause		Pause / Step / Freeze
	Mute		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+
	Play		Play / Slow
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+



 











 







 

 







 

 

**Originalfernbedienung    Ersatzfernbedienung**

	Inc. Surr.		AV / Input / RDS
	Flat		Picture / Format
	Loudness		Zoom / Size
	Bass-		Down
	Bass+		Up
	Treble-		CH- / Page-
	Treble+		CH+ / Page+
	Balance L		Left
	Balance R		Right

 

 

 

 

 

 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Power AUX	 + 	Shift + Power
	AUX	 7	7
	Program		TV/Radio /
	Sleep		Sleep / Timer
	Timer	 + 	Shift + Sleep / Timer
	Display		Display / Media
	Mute		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Inc.Surr.		AV / Input / RDS
	Flat		Picture / Format
	Loudness		Sound / Title

**Originalfernbedienung    Ersatzfernbedienung**

	Bass-		Down
	Bass+		Up
	Treble-		CH- / Page-
	Treble+		CH+ / Page+
	Balance L		Left
	Balance R		Right

