



 
 



 
 
 



 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/--
	Stop		Stop / Hold
	Play/Pause CD		Play / Slow
	Tape		Shift + 5
	Fade Muting		Mute / Dimmer
	Clock/Sleep		Smart / List

Originalfernbedienung Ersatzfernbedienung

	FM/AM		TV/Radio /
	Timer		Sleep / Timer
	I<<		I<< / Preset-
	<< Preset		<< / Tune-
	>>I		>>I / Preset+
	Preset >>		>> / Tune+
	Tuning/Group/PTY		CH+ / Page+
	Tuning/Group/PTY Down		CH- / Page-
	PTY Search		AV / Input / RDS
	Display/Progra		Shift + Display / Media
	News/Info		Info / Angle
	Display Mode		Display / Media
	Repeat		Green / APP / Repeat
	Random		Blue / Prime Video / Random
	Sound Mode		Sound / Title
	HBS		Subtitle / EQ
	Vol+		Vol+





Originalfernbedienung Ersatzfernbedienung

VOLUME	Vol-	VOL	Vol-

Originalfernbedienung Ersatzfernbedienung