

 
 












 

 

 


 

 

 





Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Sleep	 Sleep / Timer
 Display	 Display / Media
 Tuner Memory	 Zoom / Size
 Play Mode/Tuning Mode	 TV/Radio /
 Folder-	 CH- / Page-
 Repeat/FM	 Picture / Format
 Clock/Timer	 Up
 Clock/Timer Set	 Down
 Audio In	 Audio / Lang I/II
 CD	 3
 Band/Tuner	 Shift + TV/Radio / Program
 Function	 D.Menu / Top
 I<</-	 I<< / Preset-
 >>I/+	 >>I / Preset+
 <</←	 << / Tune-
 >>/→	 >> / Tune+

Originalfernbedienung	Ersatzfernbedienung
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Clear	 Exit / Cancel / Clear
 EQ	 Subtitle / EQ
 Vol+	 Vol+
 Vol-	 Vol-
 Enter	 OK
 Disk Skip	 Fav / Marker / PC
 Folder+	 CH+ / Page+

