


















 



































Originalfernbedienung Ersatzfernbedienung

Update		>>I / Preset+
Store Text		Smart / List
Reveal		I<< / Preset-
Game Coo		Eject / Surround
Display		Display / Media
On/Tim		Play / Slow
Off/Tim		Pause / Step / Freeze
Yellow		Yellow / YouTube / Repeat
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
1		1
Blue		Blue / Prime Video / Random
Audio-		Shift + Vol-
Tone-		<< / Tune-
Tone+		>> / Tune+
Color+ P.Std		Picture / Format
Disp		Shift + Display / Media
Color- S.Std		Sound / Title
Nicam/Mono		Shift + Audio / Lang I/II
Menu Up		Up
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Info		Info / Angle



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Subt.List	 Subtitle / EQ	Volume-	 Vol-
Sleep Timer	 Sleep / Timer	Menu audio	 Audio / Lang I/II
Return TV	 TV/Radio /	Chan.Down	 CH- / Page-
Menu video	 D.Menu / Top		
Text	 Text / Goto		
Txt Expand	 Zoom / Size		
TV/AV	 AV / Input / RDS		
Menu	 Menu / Home		
On/Off	 Power		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Menu Off	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		

