


















Originalfernbedienung Ersatzfernbedienung

| | | |
|-------------|---|-------------------|
| On/Off |  | Power |
| Mute |  | Mute / Dimmer |
| Update |  | Play / Slow |
| Txt Stop |  | Stop / Hold |
| Menu audio |  | Audio / Lang I/II |
| Subt.List |  | Subtitle / EQ |
| Txt Expand |  | Zoom / Size |
| Sleep Timer |  | Sleep / Timer |
| Return TV |  | TV/Radio / |
| Menu video |  | D.Menu / Top |
| Text |  | Text / Goto |
| TV/AV |  | AV / Input / RDS |
| Menu |  | Menu / Home |
| Menu Up |  | Up |
| Info |  | Info / Angle |
| Menu Left |  | Left |
| Menu Right |  | Right |

Originalfernbedienung Ersatzfernbedienung

| | | |
|--------------|---|------------------------|
| Menu Down |  | Down |
| Volume+ |  | Vol+ |
| Chan.Up |  | CH+ / Page+ |
| Volume- |  | Vol- |
| Chan.Down |  | CH- / Page- |
| 1 |  | 1 |
| 2 |  | 2 |
| 3 |  | 3 |
| 4 |  | 4 |
| 5 |  | 5 |
| 6 |  | 6 |
| 7 |  | 7 |
| 8 |  | 8 |
| 9 |  | 9 |
| 0/10 |  | 0 |
| 2.Fav P/C 2. |  | Fav / Marker / PC |
| Red |  | Red / Netflix / Search |



Originalfernbedienung Ersatzfernbedienung

| | | |
|--------|--|-----------------------------|
| Green | | Green / APP / Repeat |
| Yellow | | Yellow / YouTube / Repeat |
| Blue | | Blue / Prime Video / Random |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

Originalfernbedienung Ersatzfernbedienung

| | | |
|--|--|--|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

