



Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off		Shift + Power
	Mute		Mute / Dimmer
	AVR		Fav / Marker / PC
	DVD		Shift + 2
	CD		Shift + 3
	Tape		Shift + 5
	VID1/VCR		Guide / EPG / -/--
	VID2/TV		Shift + 1
	VID3/CBL/SAT		Shift + 0
	VID4		Shift + Guide / EPG / -/--
	AM/FM		Shift + 6
	6/8 CH		Picture / Format
	Sleep		Sleep / Timer
	Test		Text / Goto
	Vol+		Vol+
	Surr.		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

	Night		Info / Angle
	M-Room		Zoom / Size
	Vol-		Vol-
	CH./[≡?]		Yellow / YouTube / Repeat
	Up		Up
	SPKR/Menu		Menu / Home
	Left		Left
	Set		D.Menu / Top
	Right		Right
	Digital/[≡X]		Red / Netflix / Search
	Down		Down
	Delay/Normal		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	Tun-M/[≡+]		Green / APP / Repeat
	9		9
	0		0
	Mem/[≡◆]		Rec / Rec Mode
	Tuning ▲		>> / Tune+
	Direct		TV/Radio /
	Clear		Exit / Cancel / Clear
	Preset ▲		>>I / Preset+
	Tuning ▼		<< / Tune-
	OSD		Display / Media
	RDS		AV / Input / RDS
	Preset ▼		I<< / Preset-
	Dolby		Sound / Title
	DTS Surr.		Smart / List

Originalfernbedienung Ersatzfernbedienung

	DTS Neo 6		Subtitle / EQ
	Logic 7		Blue / Prime Video / Random
	Stereo		Audio / Lang I/II
	I<</Skip Down		Shift + I<< / Preset-
	Skip Up/>>I		Shift + >>I / Preset+
	<< DVD		Shift + << /
	Play DVD		Play / Slow
	>> DVD		Shift + >> /
	Stop DVD		Stop / Hold
	Pause DVD		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Vol+		Vol+
	Night		Info / Angle
	M-Room		Zoom / Size
	Vol-		Vol-
	CH./[≐?]		Yellow / YouTube / Repeat
	Up		Up
	SPKR/Menu		Menu / Home
	Left		Left
	Set		D.Menu / Top
	Right		Right
	Digital/[≐X]		Red / Netflix / Search
	Down		Down
	Delay/Normal		Setup / OPT /
	1		1
	2		2










Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	Tun-M/[≐+]		Green / APP / Repeat
	9		9
	0		0
	Mem/[≐◇]		Rec / Rec Mode
	Direct		TV/Radio /
	Clear		Exit / Cancel / Clear
	Preset ▲		Shift + >>I / Preset+
	RDS/D.Skip		AV / Input / RDS
	Preset ▼		Shift + I<< / Preset-
	I<<		I<< / Preset-
	>>I		>>I / Preset+





Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Mem/[≡ ◆]		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	l<<		l<< / Preset-
	>>l		>>l / Preset+
	Direct		TV/Radio /
	Delay/Normal		Setup / OPT /
	RDS/D.Skip		AV / Input / RDS
	SPKR/Menu		Menu / Home
	Power (On/Off)		OK
	Clear VCR		Exit / Cancel / Clear
	Vol+ VCR		Vol+
	PR+ VCR		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung












 
	Vol- VCR		Vol-
	PR- VCR		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M/[≡ +]		Green / APP / Repeat
	Preset ▲/Blue		Blue / Prime Video / Random
	Power Off		Shift + Power
	Play VCR		Shift + Play /
	Stop VCR		Shift + Stop /

Hold





Originalfernbedienung Ersatzfernbedienung

	Rec VCR		+		Shift + Rec / Rec Mode
	<< VCR		+		Shift + << /
	>> VCR		+		Shift + >> /
	1 VCR		+		Shift + 1
	2 VCR		+		Shift + 2
	3 VCR		+		Shift + 3
	4 VCR		+		Shift + 4
	5 VCR		+		Shift + 5
	6 VCR		+		Shift + 6
	7 VCR		+		Shift + 7
	8 VCR		+		Shift + 8
	9 VCR		+		Shift + 9
	0 VCR		+		Shift + 0

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	<>		Play / Slow
	>>		>> / Tune+
	<<		<< / Tune-
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

