




 



 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------------|---|----------------------|
|  | On/Eco |  | Sound / Title |
|  | Mute |  | Mute / Dimmer |
|  | Vol+ |  | Vol+ |
|  | EQ |  | Subtitle / EQ |
|  | X-Bass |  | Eject / Surround |
|  | Vol- |  | Vol- |
|  | CD |  | 3 |
|  | Tuner |  | 6 |
|  | Tape |  | 5 |
|  | Preset+ |  | >>I / Preset+ |
|  | Tune CD >>I |  | >> / Tune+ |
|  | Band · APP |  | Smart / List |
|  | Preset- |  | I<< / Preset- |
|  | I<< Tune CD |  | << / Tune- |
|  | Repeat1 · ALL |  | Green / APP / Repeat |
|  | Clock-Timer |  | Menu / Home |
|  | Prog · Set · Clear |  | TV/Radio / |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------------|--|-----------------------|
|  | Play/Pause |  | Play / Slow |
|  | Play/Pause |  | Pause / Step / Freeze |
|  | Sleep |  | Sleep / Timer |
|  | ST · Mo |  | Audio / Lang I/II |
|  | Stop |  | Stop / Hold |
|  | Timer On/Off |  | Shift + Sleep / Timer |
|  | Display |  | Display / Media |
|  | ◇ |  | Back / Return |
|  | Rec/Pause |  | Rec / Rec Mode |
|  | RDS |  | AV / Input / RDS |
|  | Intro |  | Info / Angle |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |



Program