

 

 















Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Title		Sound / Title
	Menu		Menu / Home
	Open / Close		Eject / Surround
	OSD / Setup		Setup / OPT /
	1		1
	2		2
	3		3
	Slow Fwd		Shift + Play /
	4		4
	5		5
	6		6
	Prev / Rev		<< / Tune-
	Prev / Rev		I<< / Preset-
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	Next / Fwd		>> / Tune+
	Next / Fwd		>>I / Preset+
	0		0
	Clear		Exit / Cancel / Clear
	Search		Red / Netflix / Search
	Pause / Step		Pause / Step / Freeze
	Up		Up
	Play		Play / Slow
	Left		Left
	Enter		OK
	Right		Right
	Stop		Stop / Hold
	Down		Down
	Return		Back / Return
	Play Mode		Display / Media
	A-B		Yellow / YouTube / Repeat
	Memory		Fav / Marker / PC



