



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-----------------------------|
|  | Power On |  | Power |
|  | Power Off |  | Shift + Power |
|  | Computer 1 |  | Red / Netflix / Search |
|  | Video |  | Shift + 4 |
|  | HDMI |  | Shift + 0 |
|  | Computer 2 |  | Blue / Prime Video / Random |
|  | S-Video |  | Picture / Format |
|  | Network |  | Smart / List |
|  | Menu/Exit |  | Menu / Home |
|  | Up / Keystone Up |  | Up |
|  | Auto |  | Info / Angle |
|  | Left/Vol- |  | Left |
|  | Mode Enter |  | OK |
|  | Right/Vol+ |  | Right |
|  | Eco Blank |  | Back / Return |
|  | Down/Keystone |  | Down |
|  | Source |  | AV / Input / RDS |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------|
|  | I<< |  | I<< / Preset- |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | >>I |  | >>I / Preset+ |
|  | << |  | << / Tune- |
|  | Stop |  | Stop / Hold |
|  | >> |  | >> / Tune+ |
|  | Zoom+/1 |  | 1 |
|  | Page+/2 |  | 2 |
|  | Mic/Vol+/3 |  | 3 |
|  | Zoom-/4 |  | 4 |
|  | Page-/5 |  | 5 |
|  | Mic/vol-/6 |  | 6 |
|  | Freeze/7 |  | 7 |
|  | Aspect/8 |  | 8 |
|  | 9 |  | 9 |
|  | Mute |  | Mute / Dimmer |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-----------------|--|-------------------|
| | Network Setting | | Display / Media |
| | Quick/Install/0 | | 0 |
| | Smart Eco | | Fav / Marker / PC |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

