



Originalfernbedienung Ersatzfernbedienung

	Power/alm./reset		Power
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	Mute		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	Preset		Setup / OPT /
	EQ		Subtitle / EQ
	Radio		TV/Radio /
	Snooze/dimmer		OK

Originalfernbedienung Ersatzfernbedienung

