



















 















 





















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sound		Sound / Title
	Vol+		Vol+
	Vol-		Vol-
	+10		Guide / EPG / -/-
	Up		Up
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Ent		OK
	Right		Right
	Down		Down
	Function		Smart / List
	Return		Back / Return
	< Slow		CH- / Page-
	Slow >		CH+ / Page+
	Pause		Pause / Step / Freeze
	Prev / Preset-		I<< / Preset-
	Next / Preset+		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	<< / Tuning-		<< / Tune-
	>> / Tuning+		>> / Tune+
	Angle		Info / Angle
	Audio		Audio / Lang I/II
	Clear		Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

MEMORY	Memory	PC FAV MARKER	Fav / Marker / PC
DISP	Disp	MEDIA DISPLAY	Display / Media
MENU	Menu	HOME MENU	Menu / Home
GOTO	Goto	GOTO TEXT	Text / Goto
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT /
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
FM MODE A-B REPEAT	FM Mode / Repeat A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
BAND DISC REPEAT	Band / Repeat	APP REPEAT	Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

