



 
























**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Timer		Sleep / Timer
	Prog+		Shift + Up
	Day+		Shift + Right
	Start+		Shift + Vol+
	Stop+		Shift + CH+ /
	Text Index		Text / Goto
	Text Reveal		Subtitle / EQ
	Text Size		Zoom / Size
	[Stop]		Shift + Stop /
	Prog-		Shift + Down
	Day-		Shift + Left
	Start-		Shift + Vol-
	Stop-		Shift + CH- /
	Red / VPS		Shift + Red / Netflix /
	Green / ED/EW		Shift + Green / APP /
	Yellow		Shift + Yellow / YouTube / Repeat

**Originalfernbedienung    Ersatzfernbedienung**

	Blue / C/S		Shift + Blue / Prime
	Timer		Shift + Menu /
	Timer Clear		Shift + Exit / Cancel / Clear
	Timer On/Off		Shift + Info / Angle
	SP/LP		Smart / List
	SV/V+		Display / Media
	Back / Return		Back / Return
	PAL / SEC		Picture / Format
	INS / DUB		Sound / Title
	Tip		Menu / Home
	Code		Exit / Cancel / Clear
	Counter		I<< / Preset-
	Reset		>>I / Preset+
	Audio		Audio / Lang I/II
	SAT		Shift + 0
	1		1
	2		2





**Originalfernbedienung    Ersatzfernbedienung**

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	VPT		Guide / EPG / -/--
	0		0
	AV		AV / Input / RDS
	i		Info / Angle
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Right / Vol+		Right
	Right / Vol+		Vol+
	OK		OK
	Left / Vol-		Vol-

 

 



 
 
 

 
















 





**Originalfernbedienung    Ersatzfernbedienung**

	Left / Vol-		Left
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Open / Close		Eject / Surround
	<<		<< / Tune-
	>>		>> / Tune+
	Index		Red / Netflix / Search
	Index Mark		Green / APP / Repeat
	Index Erase		Yellow / YouTube / Repeat
	Traking		Blue / Prime Video / Random





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Timer		Sleep / Timer
	Prog+		Shift + Up
	Day+		Shift + Right
	Start+		Shift + Vol+
	Stop+		Shift + CH+ /
	Text Index		Text / Goto
	Text Reveal		Subtitle / EQ
	Text Size		Zoom / Size
	[Stop]		Shift + Stop /
	Prog-		Shift + Down
	Day-		Shift + Left
	Start-		Shift + Vol-
	Stop-		Shift + CH- /
	Red / VPS		Shift + Red / Netflix /
	Green / ED/EW		Shift + Green / APP /
	Yellow		Shift + Yellow / YouTube / Repeat


**Originalfernbedienung    Ersatzfernbedienung**

	Blue / C/S		Shift + Blue / Prime
	Timer		Shift + Menu /
	Timer Clear		Shift + Exit / Cancel / Clear
	Timer On/Off		Shift + Info / Angle
	SP/LP		Smart / List
	SV/V+		Display / Media
	Back / Return		Back / Return
	PAL / SEC		Picture / Format
	INS / DUB		Sound / Title
	Tip		Menu / Home
	Code		Exit / Cancel / Clear
	Counter		I<< / Preset-
	Reset		>>I / Preset+
	Audio		Audio / Lang I/II
	SAT		Shift + 0
	1		1
	2		2






 























**Originalfernbedienung    Ersatzfernbedienung**

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	VPT		Guide / EPG / -/--
	0		0
	AV		AV / Input / RDS
	i		Info / Angle
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Right / Vol+		Right
	Right / Vol+		Vol+
	OK		OK
	Left / Vol-		Left




**Originalfernbedienung    Ersatzfernbedienung**

	Left / Vol-		Vol-
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Open / Close		Eject / Surround
	<<		<< / Tune-
	>>		>> / Tune+
	Index		Red / Netflix / Search
	Index Mark		Green / APP / Repeat
	Index Erase		Yellow / YouTube / Repeat
	Tracking		Blue / Prime Video / Random











**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV / Input / RDS
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Right / Vol+		Right
	Right / Vol+		Vol+
	Left / Vol-		Left

**Originalfernbedienung    Ersatzfernbedienung**

	Left / Vol-		Vol-
	Down / CH-		Down
	Down / CH-		CH- / Page-

