


Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		Guide / EPG / -/--
	0		0
	Prev.		I<< / Preset-
	PC		Shift + Fav / Marker / PC
	DTV		Shift + 2
	AV		Shift + 3

Originalfernbedienung Ersatzfernbedienung

	TV		Shift + 1
	Still		Pause / Step / Freeze
	Favor		Fav / Marker / PC
	Source		AV / Input / RDS
	Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format
	Display		Display / Media
	Red / P.Mode		Picture / Format
	Red / P.Mode		Red / Netflix / Search
	Green / S.Mode		Shift + Sound / Title
	Green / S.Mode		Green / APP / Repeat
	Yellow / S.Effect		Sound / Title
	Yellow / S.Effect		Yellow / YouTube / Repeat
	Blue / Stereo		Audio / Lang I/II
	Blue / Stereo		Blue / Prime Video / Random
	Up / CH+		Up
	Up / CH+		CH+ / Page+



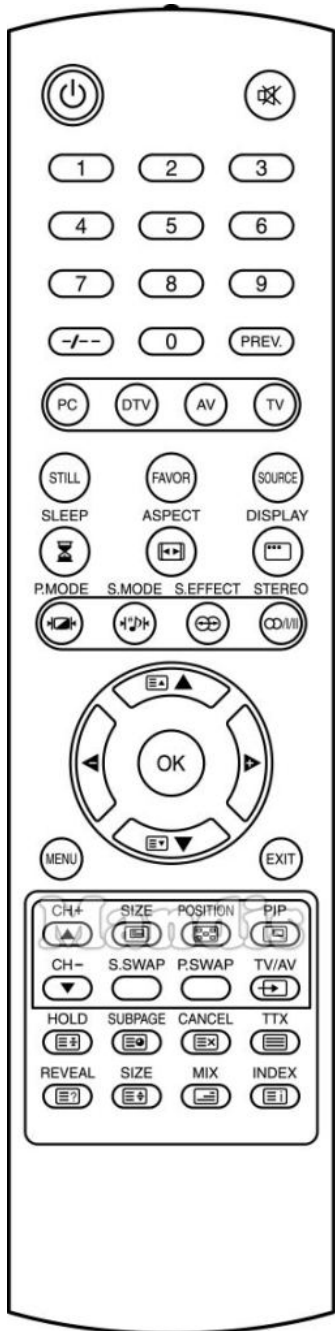

Originalfernbedienung Ersatzfernbedienung

	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Vol+
	Right / Vol+		Right
	Menu		Menu / Home
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Exit		Exit / Cancel / Clear
	PIP CH+		Shift + CH+ /
	PIP Size		Shift + Red / Netflix /
	PIP Position		Shift + Green / APP /
	PIP		Smart / List
	PIP CH-		Shift + CH- /
	PIP S.Swap		Shift + Blue / Prime
	PIP P.Swap		Shift + Yellow / YouTube /
	PIP TV/AV		Shift + AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Hold		Stop / Hold
	Subpage		Subtitle / EQ
	Cancel		Shift + Exit / Cancel / Clear
	TTX		Text / Goto
	Reveal		D.Menu / Top
	Size		Zoom / Size
	Mix		Shift + Text /
	Index		Info / Angle

