






























Originalfernbedienung Ersatzfernbedienung

POWER		Power
MUTE		Mute / Dimmer
PLAY		Play / Slow
PAUSE/STEP		Pause / Step / Freeze
STOP		Stop / Hold
REV		<< / Tune-
FWD		>> / Tune+
I<< SKIP		I<< / Preset-
SKIP >>I		>>I / Preset+
AUDIO MODE		Sound / Title
AUDIO MENU		Audio / Lang I/II
SUBTITLE MENU		Subtitle / EQ
OPEN/CLOUSE		Eject / Surround
ZOOM		Zoom / Size
PROGRAM		TV/Radio /
DVD MENU		D.Menu / Top
SETUP		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

DIGEST		Text / Goto
KEYLOCK		AV / Input / RDS
TITLE MENU		Menu / Home
UP		Up
ANGLE		Info / Angle
LEFT		Left
ENTER		OK
RIGHT		Right
CLEAR		Exit / Cancel / Clear
DOWN		Down
RETURN		Back / Return
PBC		Smart / List
SLOW/F		CH+ / Page+
DISPLAY		Display / Media
SLOW/R		CH- / Page-
1		1
2		2



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
0	 0		
BOOKMARK	 Fav / Marker / PC		
SEARCH	 Red / Netflix / Search		
REPEAT	 Green / APP / Repeat		
A--B	 Yellow / YouTube / Repeat		
RANDOM	 Blue / Prime Video / Random		
3 D	 +  Shift + 3		

