



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	MUTE		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		Shift + Guide / EPG / -/--
	RECALL		Back / Return
	RED		Red / Netflix / Search
	GREEN		Green / APP / Repeat
	YELLOW		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	BLUE		Blue / Prime Video / Random
	MENU		Menu / Home
	VOL+		Vol+
	CH+		CH+ / Page+
	INFO		Info / Angle
	VOL-		Vol-
	CH-		CH- / Page-
	<<		<< / Tune-
	>>		>> / Tune+
	PLAY/PAUSE		Play / Slow
	PLAY/PAUSE		Pause / Step / Freeze
	STOP		Stop / Hold
	UP		Up
	LEFT		Left
	OK		OK
	RIGHT		Right
	EPG		Guide / EPG / -/--





Originalfernbedienung Ersatzfernbedienung

	DOWN		Down
	EXIT		Exit / Cancel / Clear
	FORMAT		Picture / Format
	AUDIO		Audio / Lang I/II
	TEXT		Text / Goto
	PIP		Display / Media
	Timer	+	Shift + Sleep / Timer
	zzZ		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

