









Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open / Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Goto		Text / Goto
	0/10		0
	10+		Guide / EPG / -/-
	Setup		Setup / OPT /
	Play/Pause		Play / Slow
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	PBC		D.Menu / Top
	Angle		Info / Angle
	V-Mode		Picture / Format
	Prog		TV/Radio /
	OSD		Display / Media
	Default		Sleep / Timer
	>>		>> / Tune+
	Vol+		Vol+
	>>		>> / Preset+
	<<		<< / Tune-
	Vol-		Vol-
	<<		<< / Preset-
	Title		Sound / Title
	Up		Up
	Subtitle		Subtitle / EQ
	Left		Left
	Enter		OK





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Audio		Audio / Lang I/II
	Down		Down
	Menu		Menu / Home
	L/R/ST		Smart / List
	Slow		Shift + Play /
	Return		Back / Return
	USB		Shift + 8
	Step		Pause / Step / Freeze
	Zoom		Zoom / Size
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

