































 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	PIP		Setup / OPT /
	4		4
	5		5
	6		6
	Format		Picture / Format
	7		7
	8		8
	9		9
	?		Smart / List
	0		0
	Mute		Mute / Dimmer
	i		Info / Angle
	Z		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Up / P+		CH+ / Page+
	Up / P+		Up
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	TXT		Text / Goto
	Down / P-		Down
	Down / P-		CH- / Page-
	TV-G		Display / Media
	MHP		D.Menu / Top
	A/B		Shift + Yellow / YouTube /
	Radio		Shift + 6
	Radio		Shift + TV/Radio / Program
	Red / Picture		Red / Netflix / Search
	Red / Picture		Shift + Picture / Format





Originalfernbedienung	Ersatzfernbedienung
	Sleep / Timer
	Green / APP / Repeat
	Pause / Step / Freeze
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Sound / Title
	Shift + 1
	TV/Radio /

Originalfernbedienung	Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	PIP		Setup / OPT /
	4		4
	5		5
	6		6
	Format		Picture / Format
	7		7
	8		8
	9		9
	?		Smart / List
	0		0
	Mute		Mute / Dimmer
	i		Info / Angle
	Z		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Up / P+		CH+ / Page+
	Up / P+		Up
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	TXT		Text / Goto
	Down / P-		Down
	Down / P-		CH- / Page-
	TV-G		Display / Media
	Repeat		Shift + Green / APP /
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Play		Play / Slow
	Red / I<		I<< / Preset-
	Red / I<		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung











 

 

 









 







	Green / >		>> / Preset+
	Green / >		Green / APP / Repeat
	Yellow / <<<		Yellow / YouTube / Repeat
	Yellow / <<<		<<< / Tune-
	Blue / >>>		>>> / Tune+
	Blue / >>>		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	PIP		Setup / OPT /
	4		4
	5		5
	6		6
	Format		Picture / Format
	7		7
	8		8
	9		9
	?		Smart / List
	0		0
	Mute		Mute / Dimmer
	i		Info / Angle
	Z		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Up / P+		Up
	Up / P+		CH+ / Page+
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	TXT		Text / Goto
	Down / P-		Down
	Down / P-		CH- / Page-
	TV-G		Display / Media
	Repeat		Shift + Green / APP /
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Play		Play / Slow
	Red / I<		I<< / Preset-
	Red / I<		Red / Netflix / Search




Originalfernbedienung Ersatzfernbedienung

	Green / >		>> / Preset+
	Green / >		Green / APP / Repeat
	Yellow / <<<		<<< / Tune-
	Yellow / <<<		Yellow / YouTube / Repeat
	Blue / >>>		>>> / Tune+
	Blue / >>>		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

