





 



 








 

 


 

 


 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	S.Mode		Sound / Title
	Audio/Reveal		Audio / Lang I/II
	Zoom/Subpage		Subtitle / EQ
	P.Mode		Picture / Format
	Size		Zoom / Size
	Sleep		Sleep / Timer
	D.Menu		D.Menu / Top
	Text		Text / Goto

















 




 


 


 


 

 

Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	LCD Menu		Menu / Home
	Up		Up
	Index		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Recall		Back / Return
	Vol+		Vol+
	DVD Setup		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2





Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Auto		Fav / Marker / PC
	Red/Program		Red / Netflix / Search
	Green/Intro		Green / APP / Repeat
	Yellow/Repeat		Yellow / YouTube / Repeat
	Blue/A-B		Blue / Prime Video / Random
	Hold		Shift + Stop /
	Title		Shift + Sound / Title
	Nicam		Shift + Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Aspect		Shift + Picture / Format
	D.Subt.		Shift + Zoom /
	Goto		Shift + Text /
	Angle		Shift + Info / Angle
	Slow/PgUp		Shift + CH+ /
	D.Disp		Shift + Display / Media
	Step/PgDn		Shift + CH- /

