 







 

 
 




 





**Originalfernbedienung    Ersatzfernbedienung**

	POWER		Power
	MUTE		Mute / Dimmer
	P. MODE		Picture / Format
	S. MODE		Sound / Title
	TV / RADIO		TV/Radio /
	NICAM		Shift + Audio / Lang I/II
	DISPLAY		Display / Media
	ZOOM / PC.A		Shift + Zoom /
	SLEEP		Sleep / Timer
	EDIT		Shift + Text /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7











**Originalfernbedienung    Ersatzfernbedienung**

	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	BACK		Back / Return
	REC. MENU		D.Menu / Top
	PLAY / PAUSE		Play / Slow
	SKIP PREV		I<< / Preset-
	SKIP NEXT		>>I / Preset+
	REC		Rec / Rec Mode
	STOP		Stop / Hold
	REW		<< / Tune-
	FWD		>> / Tune+
	CH+		CH+ / Page+
	SOURCE		AV / Input / RDS
	VOL+		Vol+
	CH-		CH- / Page-





**Originalfernbedienung Ersatzfernbedienung**

	VOL-		Vol-
	MENU		Menu / Home
	EXIT		Exit / Cancel / Clear
	UP		Up
	LEFT		Left
	OK		OK
	RIGHT		Right
	DOWN		Down
	FAV		Fav / Marker / PC
	EPG		Guide / EPG / -/--
	USB		Shift + 8
	SETUP / ON/OFF		Setup / OPT /
	MIX / MENU		Smart / List
	INDEX / PCB		Text / Goto
	ZOOM / SIZE		Zoom / Size
	REVEAL / SUBT. / REP.		Shift + Green / APP /
	SUB. T.		Subtitle / EQ

**Originalfernbedienung Ersatzfernbedienung**

	UPDATE / A-B		Shift + Yellow / YouTube /
	SUBPAGE /		Audio / Lang I/II
	HOLD / FRE. / SUB. T.		Shift + Stop /
	RED / INFO		Shift + Info / Angle
	RED / INFO		Red / Netflix / Search
	Green / Angle		Info / Angle
	Green / Angle		Green / APP / Repeat
	YELLOW / SLOW		Yellow / YouTube / Repeat
	BLUE / EJECT		Blue / Prime Video / Random
	EJECT		Eject / Surround

