































Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Setup		Setup / OPT /
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	OSC		Fav / Marker / PC
	0		0
	Clear		Exit / Cancel / Clear
	MC		Guide / EPG / -/--
	Up		Up



 







 





 





Originalfernbedienung Ersatzfernbedienung

	Pop Up Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Top Menu		D.Menu / Top
	A-B		Shift + Yellow / YouTube /
	Repeat		Shift + Green / APP /
	Goto		Text / Goto
	Display		Display / Media
	<</<<		<< / Tune-
	Play/Pause		Play / Slow
	>>/ >>		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	I> >		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	>>I		>>I / Preset+
	Red/Program		Red / Netflix / Search
	Green/Digest		Green / APP / Repeat
	Yellow/Zoom		Yellow / YouTube / Repeat
	Blue/Bookmark		Blue / Prime Video / Random
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	PIP		Zoom / Size
	PIP Audio		Sound / Title
	Angle		Info / Angle
	Connected		Smart / List

Originalfernbedienung Ersatzfernbedienung