



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	File Mode		D.Menu / Top
	Setup		Setup / OPT /
	Suspend		AV / Input / RDS
	Page Up		CH+ / Page+
	USB		Shift + 8
	TV Mode		TV/Radio /
	Mute		Mute / Dimmer
	Page Down		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

**Originalfernbedienung Ersatzfernbedienung**

	9		9
	0		0
	Delete		Guide / EPG / -/-
	CAPS/NUM.		Fav / Marker / PC
	Return		Back / Return
	Source		Eject / Surround
	Info		Info / Angle
	Home		Shift + Menu /
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Menu		Menu / Home
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+



