














 

























 





 
Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Title		Sound / Title
R/L		Audio / Lang I/II
Subt.		Subtitle / EQ
Pbc		Picture / Format
Zoom		Zoom / Size
Progr.		TV/Radio /
Top Menu		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

Setup		Setup / OPT /
C/CH		Text / Goto
Menu		Menu / Home
Menu Up		Up
Auto/Track		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Np		Exit / Cancel / Clear
Menu Down		Down
Return		Back / Return
Volume+		Vol+
DVD/TV		Smart / List
Slow Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Slow Down		CH- / Page-



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
+10	 Guide / EPG / -/--		
0	 0		
Repeat/1/All	 Green / APP / Repeat		
Rep/A-B	 Yellow / YouTube / Repeat		

