

 

 







 

 

 






 
 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Menu |  | Menu / Home |
|  | 0 |  | 0 |
|  | Guia |  | Guide / EPG / -/- |
|  | Vol+ |  | Vol+ |
|  | ↑ |  | >> / Tune+ |
|  | C+ |  | CH+ / Page+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------------------------|
|  | Vol- |  | Vol- |
|  | ↓ |  | << / Tune- |
|  | C- |  | CH- / Page- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK/OPC |  | OK |
|  | Right |  | Right |
|  | Salir |  | Exit / Cancel / Clear |
|  | Down |  | Down |
|  | Info |  | Info / Angle |
|  | Audio |  | Audio / Lang I/II |
|  | " |  | Setup / OPT / |
|  | [=] |  | Text / Goto |
|  | ← |  | Back / Return |
|  | Red/Fav+ |  | Red / Netflix / Search |
|  | Green/Radio/TV |  | Green / APP / Repeat |
|  | Yellow/Ayuda |  | Yellow / YouTube / Repeat |



