





 













 

 















Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	*+		>>I / Preset+
	4		4
	5		5
	6		6
	-*		I<< / Preset-
	7		7
	8		8
	9		9
	O+		>> / Tune+
	-O		<< / Tune-
	O/AV		AV / Input / RDS
	O/AV		0
	P/C-ATS		Display / Media

Originalfernbedienung    Ersatzfernbedienung

	i		Info / Angle
	TXT		Text / Goto
	AUX		Shift + 7
	Blue / R		Blue / Prime Video / Random
	Up		Up
	P+		CH+ / Page+
	Right		Right
	Vol+		Vol+
	Yellow		Yellow / YouTube / Repeat
	OK		OK
	Green/Timer		Sleep / Timer
	Green/Timer		Green / APP / Repeat
	Left		Left
	Vol-		Vol-
	Down		Down
	P-		CH- / Page-
	Red		Red / Netflix / Search











 













 

 















Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	*+		>>I / Preset+
	4		4
	5		5
	6		6
	-*		I<< / Preset-
	7		7
	8		8
	9		9
	O+		>> / Tune+
	-O		<< / Tune-
	0/AV		AV / Input / RDS
	0/AV		0
	P/C-ATS		Display / Media

Originalfernbedienung    Ersatzfernbedienung

	i		Info / Angle
	TXT		Text / Goto
	AUX		Shift + 7
	Blue / R		Blue / Prime Video / Random
	P+		CH+ / Page+
	Up		Up
	Right		Right
	Vol+		Vol+
	Yellow		Yellow / YouTube / Repeat
	OK		OK
	Green/Timer		Green / APP / Repeat
	Green/Timer		Sleep / Timer
	Left		Left
	Vol-		Vol-
	P-		CH- / Page-
	Down		Down
	Red		Red / Netflix / Search



