





 

 



 



 

 

 



 





















 



 






 






 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide/List		Guide / EPG / -/--
	0/Quick Acces		0
	.../AD/SAP		Fav / Marker / PC
	Vol+		Vol+
	CH+		CH+ / Page+
	Mute		Mute / Dimmer
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung




 






	CH-		CH- / Page-
	Micro		Display / Media
	Home		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	*		D.Menu / Top
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Netflix		Shift + Red / Netflix /
	prime video		Shift + Blue / Prime Video / Random

Random





Originalfernbedienung Ersatzfernbedienung

	Disney+	 + 	Shift + Green / APP /
	Rakuten Tv	 + 	Shift + Yellow / YouTube /
	LG Channels		Smart / List
	alexia		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

