



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV Sys		D.Menu / Top
	Setup		Setup / OPT /
	Eject		Eject / Surround
	Info.		Info / Angle
	1		1
	2		2
	3		3
	Repeat A-B		Yellow / YouTube / Repeat
	4		4
	5		5
	6		6
	Repeat 1/all		Green / APP / Repeat
	7		7
	8		8
	9		9
	Goto		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	Program		TV/Radio /
	Clear		Exit / Cancel / Clear
	0		0
	Slow		Shift + Play /
	Up		Up
	Pause / Step		Pause / Step / Freeze
	Left		Left
	Play / Sel		OK
	Play / Sel		Play / Slow
	Right		Right
	Prev		I<< / Preset-
	Down		Down
	Next		>>I / Preset+
	F.Bwd		<< / Tune-
	Stop		Stop / Hold
	F.Fwd		>> / Tune+
	PBC		Smart / List





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Menu		Menu / Home
	Title		Sound / Title
	Volume+		Vol+
	Subtitle		Subtitle / EQ
	Angle		Shift + Info / Angle
	Audio		Audio / Lang I/II
	Volume-		Vol-
	Zoom		Zoom / Size
	Key #		Shift + CH+ /
	Echo+		CH+ / Page+
	Mute		Mute / Dimmer
	Vocal		Shift + Audio / Lang I/II
	Key b		Shift + CH- /
	Echo-		CH- / Page-
	Surround		Shift + Eject / Surround



