



 
















Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open/Close		Eject / Surround
	OSD		Display / Media
	1		1
	2		2
	3		3
	Prog		TV/Radio /
	4		4
	5		5
	6		6
	A-B		Yellow / YouTube / Repeat
	7		7
	8		8
	9		9
	Repeat		Green / APP / Repeat
	Goto		Text / Goto
	0/10		0

Originalfernbedienung Ersatzfernbedienung

 



 



	10+		Guide / EPG / -/--
	L/R/ST/Mo		Sound / Title
	P/N		Blue / Prime Video / Random
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Stop/Mem		Stop / Hold
	I<</Station-		I<< / Preset-
	>>I/Station+		>>I / Preset+
	Play/Pause/FM/AM		Play / Slow
	Slow		Shift + Play /
	<</Search-		<< / Tune-
	>>/Search+		>> / Tune+
	Step		Pause / Step / Freeze
	Menu		Menu / Home
	Return		Back / Return
	Angle		Info / Angle
	Up		Up




Originalfernbedienung Ersatzfernbedienung

	Setup		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Clock/Tv-Mode		Sleep / Timer
	Down		Down
	Title		Shift + Sound / Title
	Preview		Fav / Marker / PC
	Zoom		Zoom / Size
	DVD/USB/Card		D.Menu / Top
	PBC		Smart / List
	VFD		Picture / Format
	EQ		Shift + Subtitle / EQ
	Mute		Mute / Dimmer
	Treb+		CH+ / Page+
	Bass+		Shift + CH+ /
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Treb-		CH- / Page-
	Bass-		Shift + CH- /
	Vol-		Vol-

