







 





 

 











**Originalfernbedienung Ersatzfernbedienung**

	Power Standby		Shift + Power
	Power On		Power
	Off Timer		Sleep / Timer
	Display		Display / Media
	Wide		Zoom / Size
	Up		Up
	Menu / Enter		OK
	Menu / Enter		Menu / Home
	Left		Left
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer
	Volume +		Vol+
	Zoom +		CH+ / Page+
	Volume -		Vol-
	Zoom -		CH- / Page-

**Originalfernbedienung Ersatzfernbedienung**

	Side By Side		AV / Input / RDS
	Single		Setup / OPT /
	Picture In Picture		Picture / Format
	Active Select		Smart / List
	Input Video 1		5
	Input DVD / HD 1		1
	Input Video 2		6
	Input DVD / HD 2		2
	PC / RGB		Fav / Marker / PC
	Input DVD / HD 3		3
	Picture Memory		D.Menu / Top
	Input DVD /		4

