



Originalfernbedienung **Ersatzfernbedienung**

MUTE	Mute	DIMMER MUTE	Mute / Dimmer
STAND-BY	Stand-by	Power	Power
FRONT+	Front+	TV 1	1
FRONT-	Front-	DVD 2	2
CEN+	Cen+	CD - STB 3	3
CEN-	Cen-	VIDEO 4	4
SURRE+	Surr+	TAPE 5	5
SURRE-	Surr-	TUNER 6	6
TRE+	Tre+	CH PAGE +	CH+ / Page+
TRE-	Tre-	CH PAGE -	CH- / Page-
BASS+	Bass+	Smart	Smart / List
BASS-	Bass-	Media Display	Display / Media
SUB+	Sub+	Media Display	Display / Media
SUB-	Sub-	Media Display	Display / Media
VOL+ MASTER	Master Vol+	VOL +	Vol+
VOL- MASTER	Master Vol-	VOL -	Vol-

Originalfernbedienung **Ersatzfernbedienung**

